

TamlynWrap® Rainscreen 6.3

Tech Support / Sales: 800-334-1676
www.tamlyn.com

1. Rough Opening

The **TamlynWrap® RainScreen 6.3** is a multi-layer water management system. This product is intended for use over existing water-resistive barrier (WRB) or coated OSB systems. Ideal for use behind Stucco, Stone, Fiber Cement Board and Metal Panels. The **6.3 mm (1/4")** thick cavity spacers are non-compressible and can act as furring strips to promote enhanced drainage and drying capacity with improved installation efficiency.

The three-dimensional design provides vertical and cross-ventilation. The non-compressible pattern evenly supports claddings, which helps prevent warping and other aesthetic issues.

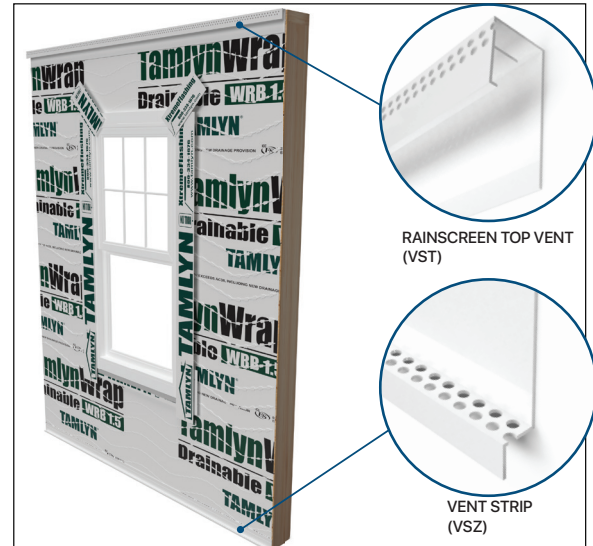


FIG 1:

- Install TAMLYN's **VST** and **VSZ** vent strips over existing WRB as shown in **(FIG 1)**.

2. RainScreen Wrap Install



FIG 2:

3. Complete Installation

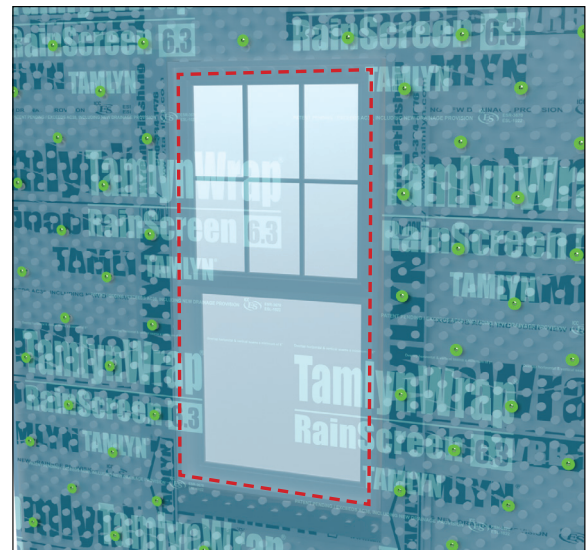


FIG 3:

- Unroll **TamlynWrap® RainScreen 6.3** over existing WRB system and window. Fasten using cap fasteners every 3 sq. ft. **(FIG 2)**.
- Complete installation of **TamlynWrap® RainScreen 6.3** over the existing WRB system as shown in **(FIG 3)**.

4. Trim TamlynWrap[®]

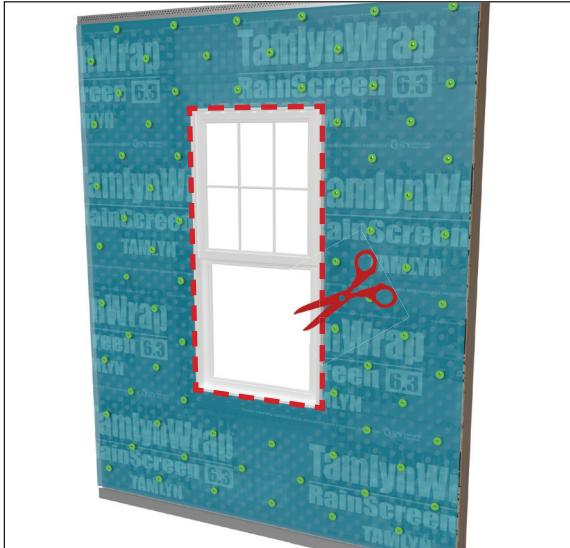


FIG 4:

5. Final Step

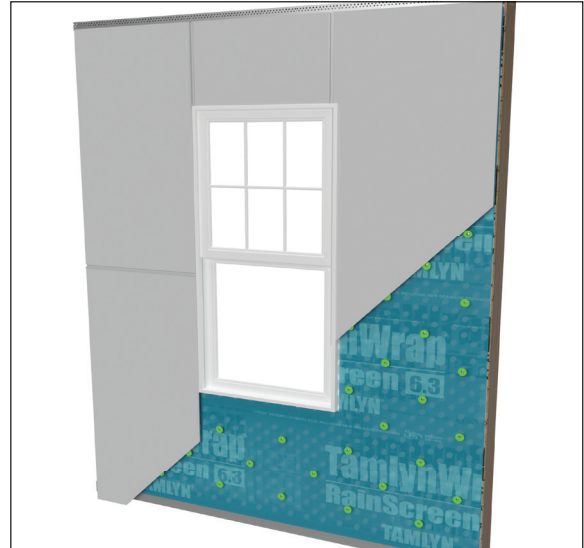


FIG 5:

- Trim **TamlynWrap[®] RainScreen 6.3** for a tight fit around windows along the edges and any other penetrations as shown in **(FIG 4)**.
- Install cladding as per manufacturer guidelines as shown in **(FIG 5)**.